

# *Optronis*

*Make time visible*

## **CamRecord-Sprinter Series Programmer Guide**




# CAMRECORD-SPRINTER PROGRAMMER GUIDE

OVERVIEW .....	2
GETTING STARTED .....	4
<i>Size/Speed/Exposure parameters handling</i> .....	4
<i>Video live handling</i> .....	5
<i>Recording handling</i> .....	5
<i>Camera memory recording cinematic</i> .....	6
CAMERA COMMANDS .....	9
<i>Camera Information</i> .....	9
CAM_GETSENSORCOLOR .....	9
CAM_GETSENSORBAYERTYPE .....	9
CAM_SETSENSORSYNCHRO [SYNC] .....	9
CAM_GETFGSIZE .....	10
CAM_GETSERIALNUMBER .....	10
CAM_GETCAMERATYPE .....	10
CLOSE_CONNECTION .....	10
GETSERVER_VERSION .....	10
<i>Sensor size Commands</i> .....	11
CAM_SETSENSORSIZE [W] [H] .....	11
CAM_GETSENSORSIZE [bMAX] .....	11
CAM_GETSENSORLEFTTOP [W] [H] .....	11
CAM_GETSENSORSCALE .....	12
CAM_SETSENSORENSITIVITY [GAIN] .....	12
CAM_GETSENSORENSITIVITY .....	12
<i>Sensor speed Commands</i> .....	13
CAM_SETSENSORSPEED [SP] .....	13
CAM_GETSENSORSPEED .....	13
CAM_GETREALSENSORSPEED .....	13
CAM_GETSENSORSPEEDRANGE .....	13
CAM_GETSENSORSPEEDMAX [RES_X] [RES_Y] [0] [0] [0] .....	14
<i>Sensor Exposure time Commands</i> .....	14
CAM_SETSENSOREXPOSURE [EXP] .....	14
CAM_GETSENSOREXPOSURE .....	14
CAM_GETSENSOREXPOSURERANGE .....	14
CAM_GETSENSOREXPOSUREMIN .....	15
CAM_GETSENSOREXPOSUREMAX .....	15
CAM_GETSENSOREXPOSUREMAX2 [RES_X] [RES_Y] [FPS] [0] [0] [0] .....	15
<i>Live Commands</i> .....	16
CAM_LIVESTART [Q] .....	16
CAM_LIVESTOP .....	16
CAM_WHITEBALANCEENABLED .....	16
CAM_SETWHITEBALANCE .....	16
CAM_RESETWHITEBALANCE .....	17
<i>Memory Commands</i> .....	17
GET_IMAGE [T] .....	17
CAM_FG_GETPARAM .....	17
CAM_FG_ISSEQUENCETHERE .....	18
CAM_PLAYSTART .....	18
CAM_PLAYSTOP .....	18
CAM_FG_GETFRAME_TM [iframenum] [bSnap] [b8] [bRAW] .....	18
CAM_FG_SETUP [Numframes] [iTriggerSource] [TriggerPos] .....	19
CAM_FG_RECORDSTART .....	19
CAM_FG_RECORDSTOP .....	20
CAM_FG_ABORTRECORD .....	20
CAM_FG_SOFTTRIGGER .....	20
CAM_FG_ENABLEFORCESOFTTRIGGER [bforce] .....	20
CAM_FG_SETAUTOTRIGGER [left] [top] [right] [bottom] [per] .....	21
CAM_FG_GETSTATUS .....	21
CAM_FG_GETMAXFRAMES .....	21
SSD COMMANDS .....	22
<i>SSD Discovery Commands</i> .....	22
CAM_SSD_GETSTATUS .....	22

CAM_SSD_GETSSDPARAM .....	22
CAM_SSD_FORMAT .....	23
<i>SSD Read Commands</i> .....	23
CAM_SSD_SETCURRENTSEQ .....	23
CAM_SSD_GETCURRENTSEQ .....	23
CAM_SSD_GETSEQHEADER .....	23
CAM_SSD_GETUSERINFO .....	25
CAM_SSD_EDITUSERINFO .....	25
CAM_SSD_PLAYSTART .....	25
CAM_SSD_PLAYSTOP .....	26
CAM_SSD_GETFRAMETM .....	26
<i>SSD Write Commands</i> .....	27
CAM_SSD_DELSEQ .....	27
CAM_SSD_SAVESEQ .....	27
GET SSD Saving Progression (command "REG_READ 1A80") .....	27
<i>Return codes from the Camera Commands</i> .....	28
CAMRECORD-SPRINTER DEMO .....	29
<i>Description:</i> .....	29
1900DLL.DLL .....	30
<i>Getting started</i> .....	30
<i>Function description</i> .....	30
int CAM_IPScan () .....	30
int CAM_IPScanList (char *s) .....	30
int CAM_Connect (char *s, int inode) .....	31
int CAM_DisConnect (int inode) .....	31
int CAM_SendCommand (int inode, char *cmd, char *ret) .....	31
int CAM_GetBuffer (int inode, char *buf, int sizeX, int sizeY) .....	31
SSDLIB.DLL .....	33
int exSSD_IsDrive() .....	33
int exSSD_OpenDrive() .....	33
int exSSD_GetSeqNumber(__int64 *n) .....	33
int exSSD_SetCurrentSeq(__int64 seq) .....	34
int exSSD_GetSeqHeader(__int64 seq, long *frames, int *resoX, int *resoY, long *fps, long *exptime, long *trigpos, int *mode, __int64 *realfpsHex, int *bFG8bits, unsigned char *Cam_SerialN, int *bSensorColor, int *sensorBayer, int *ssdTimeMarker_en, int *recordLeft, int *recordTop) .....	34
int exSSD_GetSeqHeaderTrigTM(__int64 seq, long *frames, int *resoX, int *resoY, long *fps, long *exptime, long *trigpos, int *mode, __int64 *realfpsHex, int *bFG8bits, unsigned char *Cam_SerialN, int *bSensorColor, int *sensorBayer, int *ssdTimeMarker_en, int *recordLeft, int *recordTop, __int64 *trigTM, bool *wbCoeffAvailable, int *wbCoeff1, int *wbCoeff2, int *wbCoeff3, int *wbCoeff4) .....	35
int exSSD_GetUserInfo(int *userInfoSize, unsigned char *userInfo) .....	36
int __cdecl exSSD_EditUserInfo(char *userInfo) .....	36
int __cdecl exSSD_GetFrame(__int64 *timeMarker, __int64 frame, unsigned char *pimage) .....	36
int exSSD_DelNSeq(int _seqToDelNb) .....	36
<i>SSDLib Example</i> .....	37

# Overview

Each camera on the network can be addressed through its IP address via ports 5000 and 5500. To communicate with the camera, ethernet command strings have to be send and an ethernet answer string is replied from the camera.

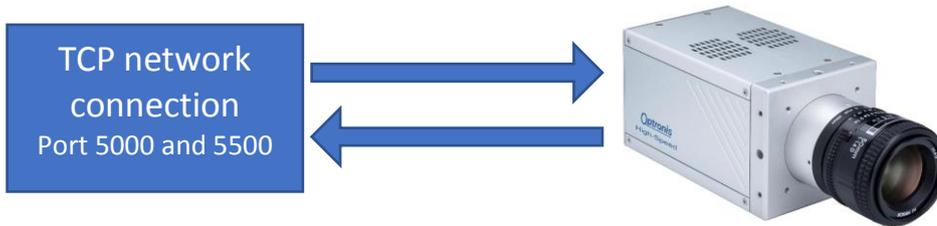

On the **Camera Commands** section prototypes of all commands are described.

Communication with the camera can be done by using:

Open a **socket** at the specific IP address and port for simple tests and debugging.



Use your **own code**.




Use Optronis examples program described on the **CamRecord-Sprinter Demo**



Use 1900dll.dll.



To access data on the SSD when removed from the camera and installed on a separate docking station the **SSDLIB.dll** has to be used.

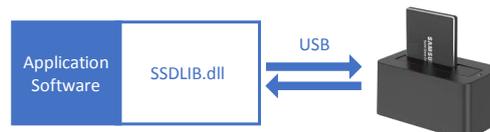

Each command consists in a string formed by the command name [COMMAND\_NAME] followed by its parameters [Input\_ParamXX] and using space delimiter.

- Command prototype with no input parameter:
  - o "[COMMAND\_NAME]"
- Command prototype with 1 input parameter:
  - o "[COMMAND\_NAME] [Input\_Param1]"
- Command prototype with N input parameters:
  - o "[COMMAND\_NAME] [Input\_Param1] [Input\_Param2] ... [Input\_ParamN]."

Each answer consists in a string formed by command return code [RET] followed by its returned parameters [Return\_paramXX] and using space delimiter.

- Command answer prototype with no return parameter:
  - o "[RET]"
- Command answer prototype with 1 return parameter:
  - o "[RET] [Return\_Param1]"
- Command answer prototype with N return parameters:
  - o "[RET] [Return\_Param1] ... [Return\_ParamN]"

### Camera control summary:

- Open a socket to camera IP address using 1 of camera control ports (5000 or 5500)
- Send command
- Get and process command answer

### Examples:

- send\_command("CAM\_GETSENSORCOLOR"); => Get answer="0 0"  
Answer follows prototype [RET] [COLOR], so answer means RET=0=Successfully operation and COLOR=0=monochrom sensor.
- send\_command("CAM\_SETSENSOREXPOSURE 1000"); => Get answer="0"  
Answer follows prototype [RET], so answer means RET=0=Successfully operation.

## Getting started

---

The software described in this CamRecord Sprinter Programmer Guide is designed to work with Windows 7/10 32/64 bit and allows to operate one or more camera of CamRecord Sprinter series.

The CamRecord Sprinter Programmer Guide is delivered with the following structure:

- 'redist' folder with the redistributable package to install vcredist.exe.
- 'doc' folder with the current document
- 'lib' folder with the following files: cam1900dll.dll, SSDLib.dll, cam1900dll.lib, SSDLib.lib (the dynamic libraries), cam1900dll.h, SSDLib.h (the header files)
- 'sample': a Microsoft Visual Studio 2013 sample project called 'CamRecord-Sprinter Demo' allows you to access to the main function of the camera

### **IMPORTANT:**

The cam1900dll.dll, cam1900dll.lib and cam1900dll.h must be copied in the same folder as your application executable.

For the Microsoft Visual projects settings, the working directory has also to point to the same folder as your application executable.

IP address handling is described on the user manual of the camera.

## Size/Speed/Exposure parameters handling


To set a frame size, call the function CAM\_SETSENSORSIZE. The nearest available format will be set and can be retrieved by calling CAM\_GETSENSORSIZE.

After the CAM\_SETSENSORSIZE call, the camera speed is set to the maximum available speed according to the current sensor size. The current sensor speed can be retrieved by using the function CAM\_GETSENSORSPEED. To set another speed, use the function CAM\_SETSENSORSPEED with a speed in the range returned by CAM\_GETSENSORSPEEDRANGE.

After the CAM\_SETSENSORSPEED call, the camera exposure time is set to the maximum available exposure time according to the current sensor speed. The current sensor exposure time can be retrieved by using the function CAM\_GETSENSOREXPOSURE. To set another exposure time, use the function CAM\_SETSENSOREXPOSURE with an exposure time less or equal than the value returned by CAM\_GETSENSOREXPOSUREMAX.


## Video live handling

The typical video live schema can be given by:

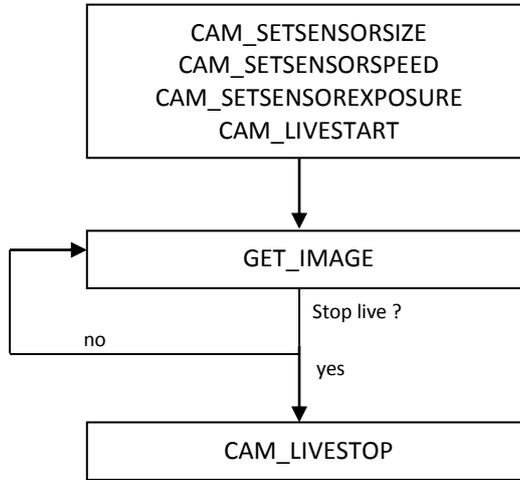


## Recording handling

The typical recording schema can be given by:

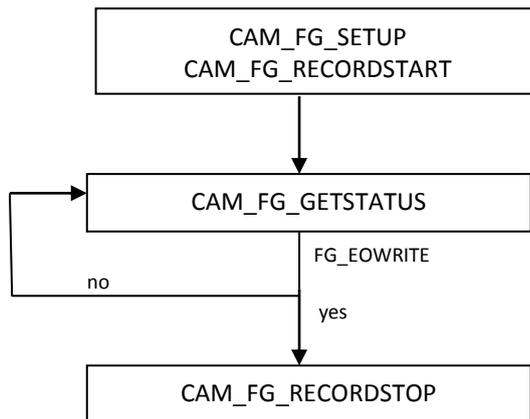


## Camera memory recording cinematic


To acquire a sequence, it is useful to know the mechanism of the camera memory (see schema below). The first step is to define the number of frames to acquire (Nb\_Frames) and the position of the trigger in the sequence (Trigger\_Pos). The possibility to place the trigger position is very interesting when the user wants to analyze what happened before the trigger. This feature is available thanks to the ring memory of the camera. After the record command is sent by the host computer, camera is filling its memory with Trigger\_Pos frames, so that user is able to analyze the event before the trigger. After that, the memory status is FG\_EOFILL. The camera is waiting for a trigger and continuously writes frames into memory. When arriving at the end of the memory capabilities, the camera continues to write from the beginning of the memory: that is called ring memory. When the camera is triggered, (Nb\_Frames-Trigger\_Pos) frames are written to the memory. After that, the memory status is FG\_EOWRITE and the sequence is available for reading.

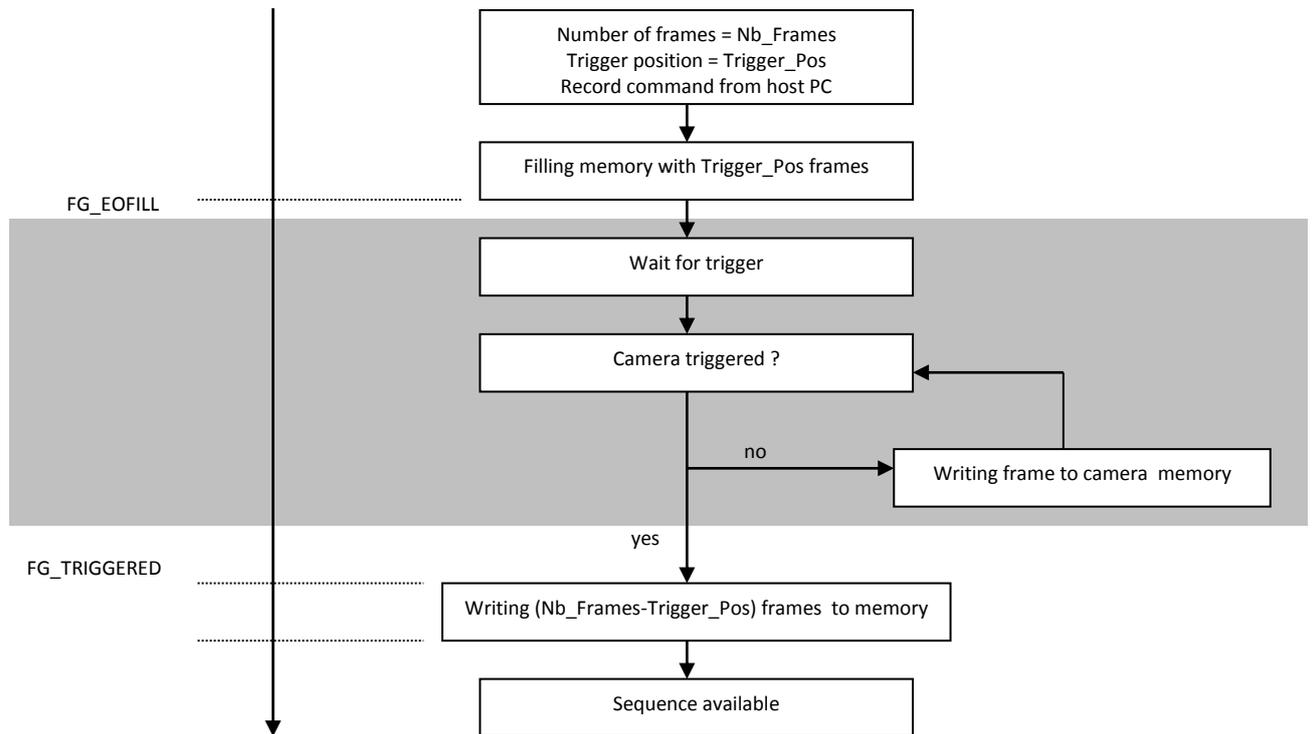


## SSD Discovery and Formatting Operations

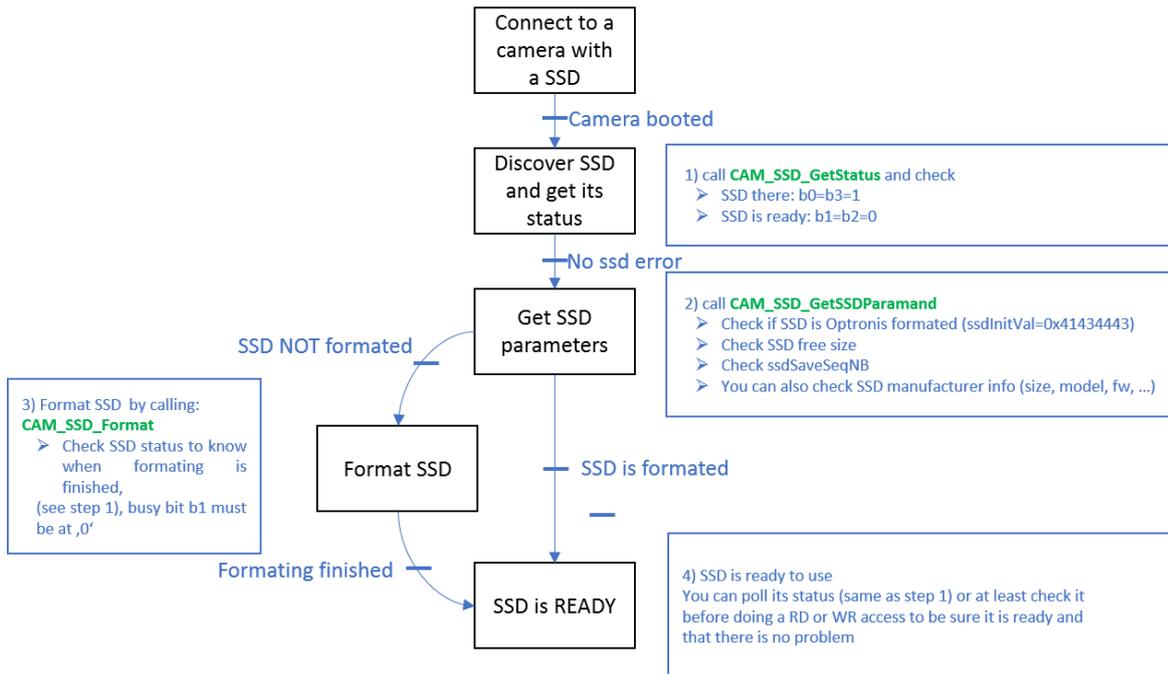

## SSD Read Operations

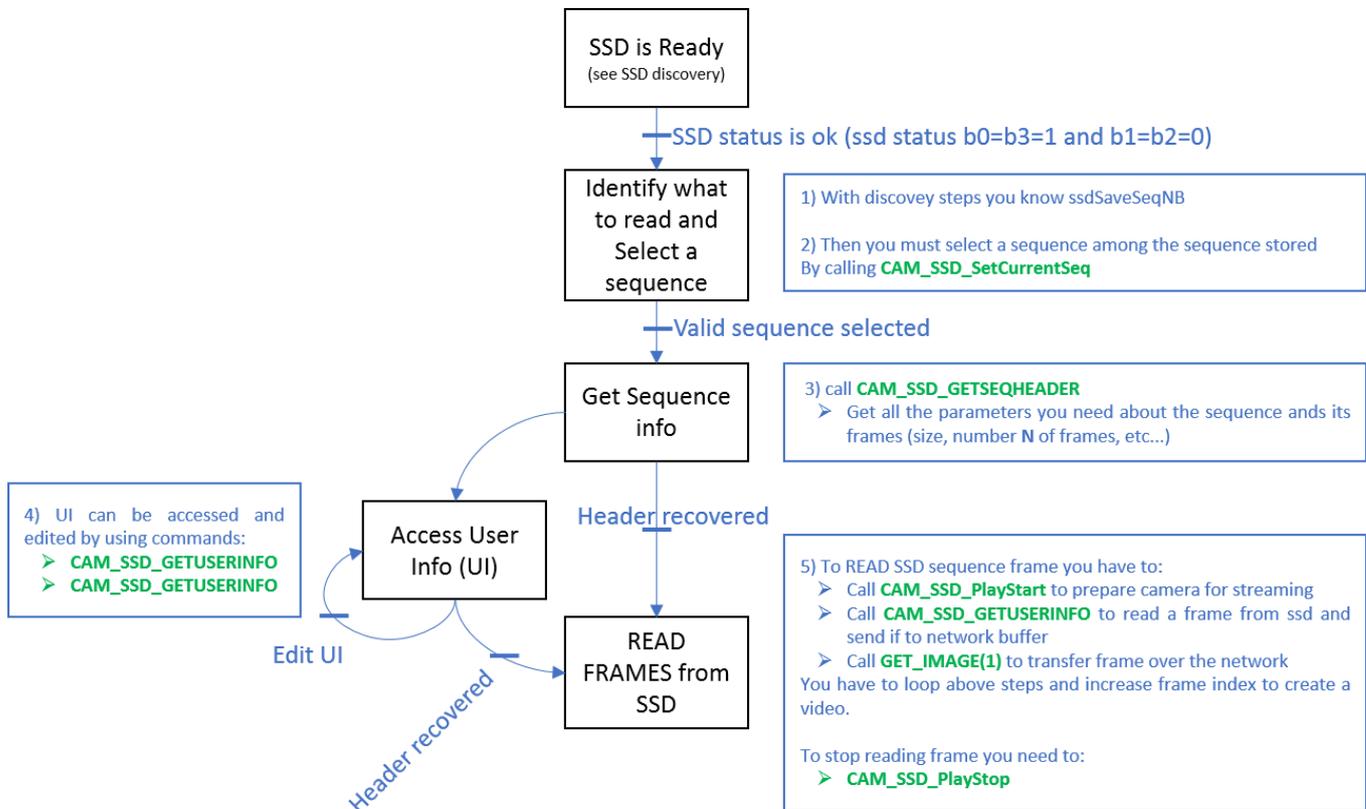

## SSD Write Operations

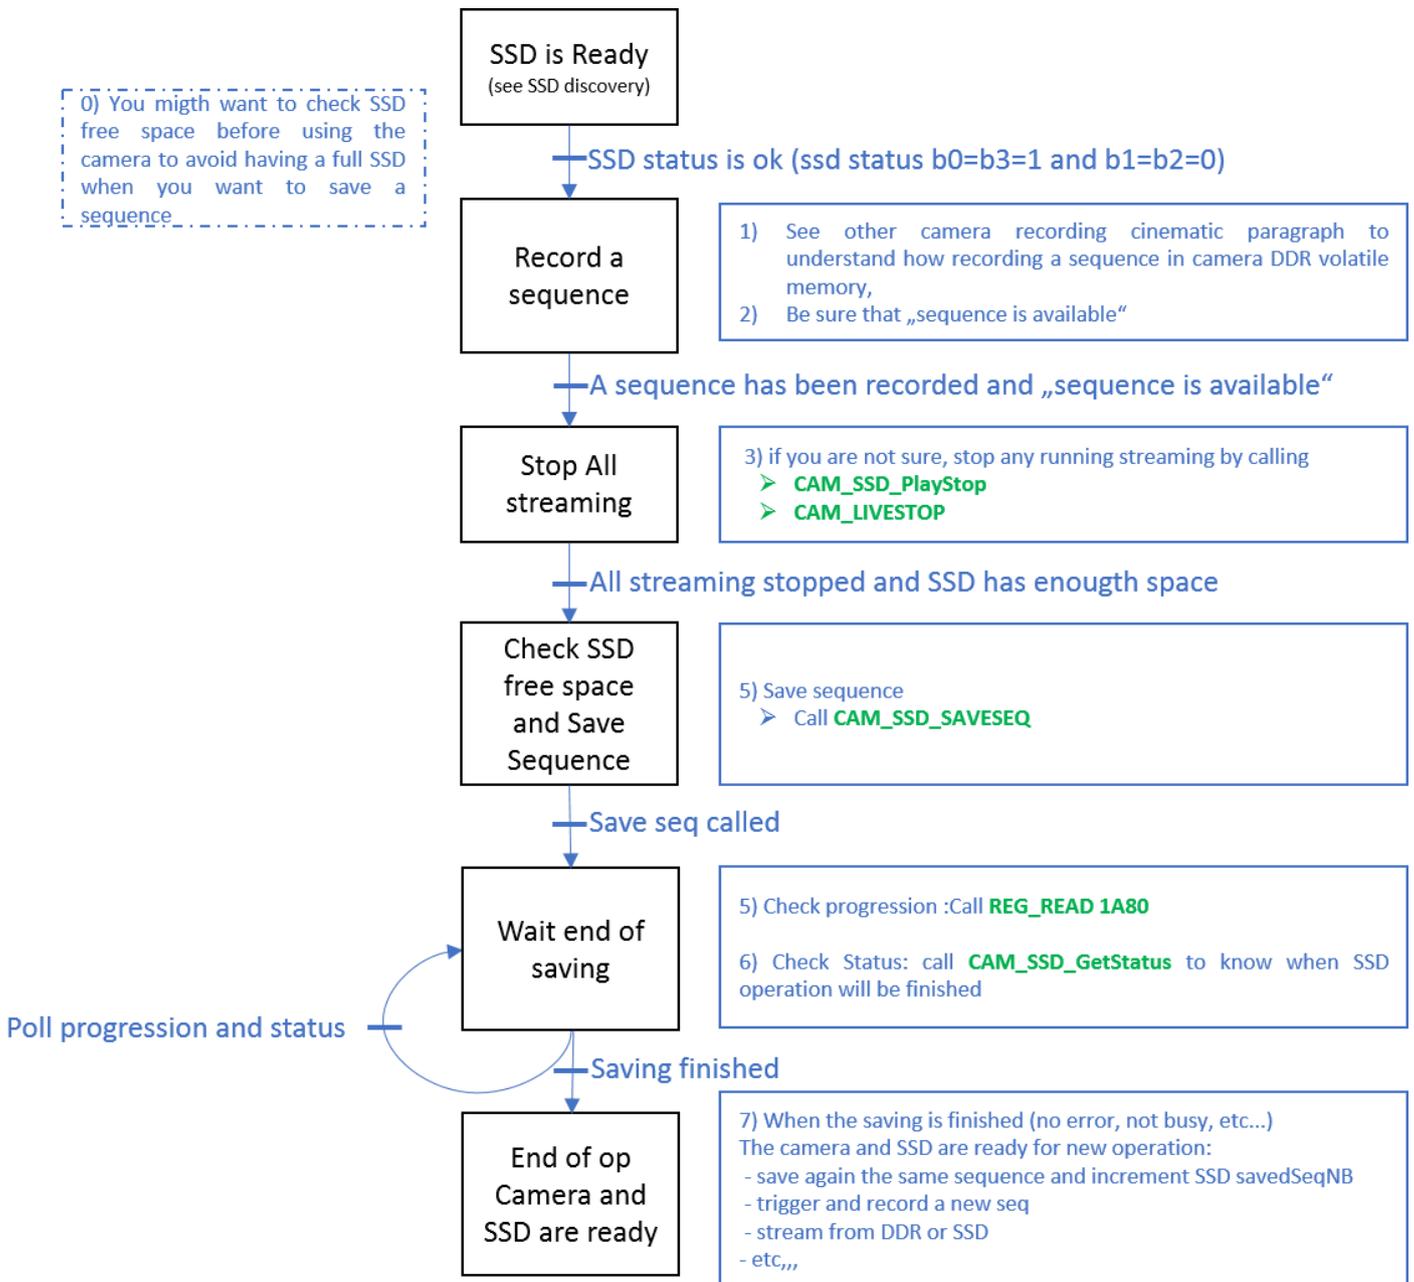

## Camera Commands

---

### Camera Information

#### CAM\_GETSENSORCOLOR

Return the sensor type of the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [COLOR]**

[COLOR] is 1 for a color sensor, else 0

#### CAM\_GETSENSORBAYERTYPE

Return the sensor bayer type of the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [BAYER]**

[BAYER] is

BAYER\_GRBG for GRBG bayer pattern

BAYER\_GBRG for GBRG bayer pattern

BAYER\_RGGB for RGGB bayer pattern

BAYER\_BGGR for BGGR bayer pattern

#### CAM\_SETSENSORSYNCHRO [SYNC]

Set the synchronization mode of the camera.

**Note:** By default, at camera power up, the synchronization mode is 0 (intern)

**Input parameters:**

- [SYNC]: 0 for internal synchronization, 1 for external synchronization.

**Return string: [RET]**

## CAM\_GETFGSIZE

Return the DDR internal memory size (in giga bytes) of the camera.

### Note:

**Input parameters:**

- none

**Return string: [RET] [SIZE]**

[SIZE]: DDR internal camera memory in giga bytes.

## CAM\_GETSERIALNUMBER

Return the serial number of the camera.

### Note:

**Input parameters:**

- none

**Return string: [RET] [SN]**

[SN]: camera serial number

## CAM\_GETCAMERATYPE

Return the type of the camera

### Note:

**Input parameters:**

- none

**Return string: [RET] [TYPE]**

[TYPE] of the camera

CAM\_CR\_S3500 : Sprinter S3500

## CLOSE\_CONNECTION

Close the connection to the camera

### Note:

**Input parameters:**

- none

**Return string: [RET]**

## GETSERVER\_VERSION

Returns the cr\_server version

### Note:

**Input parameters:**

- none

**Return string: [RET] [VERSION]**

- Version of the cr\_server.

## Sensor size Commands

### CAM\_SETSENSORSIZE [W] [H]

Set the current size of the camera.

**Note:****Input parameters:**

- [W]: sensor width
- [H]: sensor height

**Return string: [RET]**

### CAM\_GETSENSORSIZE [bMAX]

Return the current or maximal sensor size of the camera

**Note:****Input parameters:**

- [bMAX] : 1 if you want the function to return the maximal size or 0 if you want the current size.

**Return string: [RET] [W] [H]**

[W]: current sensor width if [bMAX] is 0 else maximal sensor width.

[H]: current sensor height if [bMAX] is 0 else maximal sensor height.

### CAM\_GETSENSORLEFTTOP [W] [H]

Return the (left,top) position of the sensor active area of the camera node [node] for a (sx,sy) frame format

**Note:****Input parameters:**

- [W]: width of the frame
- [H]: height of the frame

**Return string: [RET] [L] [T]**

[L]: left corner of the active area

[T]: top corner of the active area

## CAM\_GETSENSORSCALE

This command read the minimum, maximum and the increment for the width and height.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [X\_MIN] [X\_MAX] [X\_INC] [Y\_MIN] [Y\_MAX] [Y\_INC]**

[X\_MIN]: Minimum image width

[X\_MAX]: Maximum image width

[X\_INC]: Increment for the image width

[Y\_MIN]: Minimum image height

[Y\_MAX]: Maximum image height

[Y\_INC]: Increment for the image height

## CAM\_SETSENSORENSITIVITY [GAIN]

Get the current active gain. Available at cr\_server version 0.90.17

**Note:**

**Input parameters:**

- [GAIN]: Value for the gain, valid values are 1, 2 or 4.

**Return string: [RET]**

## CAM\_GETSENSORENSITIVITY

Get the current active gain.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [GAIN]**

[GAIN]: Current gain possible values are 1, 2 or 4.

## Sensor speed Commands

### CAM\_SETSENSORSPEED [SP]

Set the current speed of the camera.

**Note:**

**Input parameters:**

- [SP]: sensor speed in fps

**Return string: [RET]**

### CAM\_GETSENSORSPEED

Return the current speed of the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [S]**

[S]: Current sensor speed in fps.

### CAM\_GETREALSENSORSPEED

Return the estimated speed coming out from the camera (only used with internal synchronization).

**Note:**

**Input parameters:**

- none

**Return string: [RET] [S]**

[S]: Current estimated sensor speed in fps.

### CAM\_GETSENSORSPEEDRANGE

Return the current speed range of the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [MIN] [MAX]**

- [MIN]: lowest speed available with current sensor size
- [MAX]: highest speed available with current sensor size

## CAM\_GETSENSORSPEEDMAX [RES\_X] [RES\_Y] [0] [0] [0]

Return the maximum available speed for the current sensor size.

### Note:

#### Input parameters:

- [RES\_X]: Width of sensor.
- [RES\_Y]: Height of sensor.
- [0]: Set always to 0.
- [0]: Set always to 0.
- [0]: Set always to 0.

#### Return string: [RET] [SPEED\_MAX]

[SPEED\_MAX]: Maximum frame rate.

## Sensor Exposure time Commands

### CAM\_SETSENSOREXPOSURE [EXP]

Set the current exposure time of the camera.

### Note:

#### Input parameters:

- [EXP]: sensor exposure time in us

#### Return string: [RET]

### CAM\_GETSENSOREXPOSURE

Return the current exposure time of the camera.

### Note:

#### Input parameters:

- none

#### Return string: [RET] [EXP]

[EXP]: Current sensor exposure time in us.

### CAM\_GETSENSOREXPOSURERANGE

Return the current exposure time of the camera.

### Note:

#### Input parameters:

- none

#### Return string: [RET] [MIN] [MAX]

[MIN]: lowest available exposure time with current speed and sensor size for the camera.

[MAX]: highest available exposure time with current speed and sensor size for the camera.

Current sensor exposure time in us.

### CAM\_GETSENSOREXPOSUREMIN

Return the lowest available exposure time.

#### Note:

##### Input parameters:

- none

##### Return string: [RET] [EXP\_MIN]

[EXP\_MIN]: Minimum exposure time.

### CAM\_GETSENSOREXPOSUREMAX

Return the highest available exposure time.

#### Note:

##### Input parameters:

- none

##### Return string: [RET] [EXP\_MAX]

[EXP\_MAX]: Maximum exposure time.

### CAM\_GETSENSOREXPOSUREMAX2 [RES\_X] [RES\_Y] [FPS] [0] [0] [0]

Return the maximum available exposure time for a given sensor speed and size.

#### Note:

##### Input parameters:

- [RES\_X]: Width of sensor
- [RES\_Y]: Height of sensor
- [FPS]: Speed of sensor
- [0]: Set always to 0.
- [0]: Set always to 0.
- [0]: Set always to 0.

##### Return string: [RET] [EXP\_MAX]

[EXP\_MAX]: Maximum exposure time.

## Live Commands

### CAM\_LIVESTART [Q]

Start video live mode for the camera:

- Initialize transfer
- Send live mode command to camera

**Note:** After call of this function, camera sends live frames from camera to PC. To get a frame into a buffer, call the function GET\_IMAGE. To stop video live mode, call the function CAM\_LIVESTOP.

**Input parameters:**

- [Q]: please always set it to 0

**Return string: [RET]**

### CAM\_LIVESTOP

Stop video live mode for the camera:

- Stops the transfer
- Send stop live mode command to camera

**Note:** After call of this function, no more frames are sent from camera

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_WHITEBALANCEENABLED

Returns if the white balance correction is activated or not.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [ENA]**

[ENA]: 1 if white balance correction is activated in the camera else 0

### CAM\_SETWHITEBALANCE

Calculates the white balance coefficient for the camera (only for a color camera) and apply it to the camera.

**Note:** The white balance coefficients are calculated in a 20x20 window on the center of a camera frame.

**Input parameters:**

- none

**Return string: [RET]**

## CAM\_RESETWHITEBALANCE

Resets the white balance coefficient for the camera (only for a color camera).

### Input parameters:

- none

### Return string: [RET]

## Memory Commands

### GET\_IMAGE [T]

Get a 8-bits frame buffer from the camera.

**Note:** If live is started, the camera returns a live frame.  
 When you want to get a frame from an acquired sequence, you have to call CAM\_FG\_GETFRAME\_TM before.  
 When you want to get a frame from a sequence stored in the internal SSD, you have to call CAM\_SSD\_GETFRAME\_TM before.

### Input parameters:

- [T]: please always set it to 1

### Return string: [RET] [Px1y1] [Px2y2]... [PxWyH]

where Pxiyi is the pixel value of coordinates (xi,yi)

### CAM\_FG\_GETPARAM

Retrieves the acquired sequence parameters of the camera.

**Note:**

### Input parameters:

- none

### Return string: [RET] [frames] [resoX] [resoY] [fps] [exptime] [trigpos] [bFG8bits] [mode] [nbSeq] [realfps]

[frames]: Number of acquired frames

[resoX]: Width of frame

[resoY]: Height of frames

[fps]: frame rate

[exptime]: exposure time (in us)

[trigpos]: trigger position

[bFG8bits]: TRUE if memory is configured in 8-bits mode, FALSE if memory is configured in 10-bits mode

[mode]: 0

[nbseq]: 1  
 [realfps]: estimated frame rate coming out from the camera (only used with internal synchronisation)

### CAM\_FG\_ISSEQUENCETHERE

Return if a sequence has been acquired into camera memory.

**Note:**

**Input parameters:**

- none

**Return string: [RET] [there]**

[there] 0 if a sequence has been successfully acquired into camera memory else 4.

### CAM\_PLAYSTART

Switch memory into the playing mode.

**Note:** Before calling the function CAM\_Get\_FG\_Frame, camera memory has to be switched into the playing mode by calling CAM\_PlayStart.

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_PLAYSTOP

Exits memory from the playing mode.

**Note:**

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_FG\_GETFRAME\_TM [iframenum] [bSnap] [b8] [bRAW]

Asks the camera to send a memory frame with its time marker.  
 To get the image, then call GET\_IMAGE

**Input parameters:**

- [iframenum]: index of frame to retrieve from camera memory. Index must be between 1 and the number of acquired frames.
- [bSnap]: by default, bSnap is set to false. In that case, CAM\_PlayStart has to be started before the call of the function. This is used to play a sequence for example: first, the initialization of the play mode is made by calling the

function CAM\_PlayStart; then, in a loop, you can play every frame by calling CAM\_FG\_GetFrame. If bSnap is set to true, you don't need to start the CAM\_PlayStart function before. In that case, the CAM\_FG\_GetFrame can be called without the CAM\_PlayStart initialization.

- [b8]: please set to 1
- [bRAW]: please set to 1

**Return string: [RET] [ITimeMarker]**

[ITimeMarker] : time marker buffer (unsigned 64-bits integer) expressed in microseconds.

If bit[63] = '1' IrigB is connected else no IrigB detected

If Irig-B is present or detected (only for CR600 with IRIGB option), the time marker buffer is composed like this :

- [63..60] status bits
- [59..44] Irig-B days buffer
- [43..36] Irig-B hours buffer
- [35..28] Irig-B minutes buffer
- [27..20] Irig-B seconds buffer
- [19..0] Irig-B  $\mu$ seconds buffer

If Irig-B isn't present or detected, then the time marker buffer is composed like this :

- [63..60] status bits
- [59..0] Irig-B  $\mu$ seconds buffer

### CAM\_FG\_SETUP [Numframes] [iTriggerSource] [TriggerPos]

Setup of the camera memory recording parameters

**Note:** To call before CAM\_FG\_RecordStart

**Input parameters:**

- [Numframes]: number of frames to acquire
- [iTriggerSource]: trigger source of the recording.
  - TRIG\_KEYBOARD (0) => trigger source is Software
  - TRIG\_EXT\_TTL (1) => trigger source is extern TTL rising edge
  - TRIG\_EXT\_SWITCH (2) => trigger source is extern falling edge
  - TRIG\_AUTO (3) => trigger source is AutoTrigger
- [TriggerPos]: trigger position (must be between 1 and [Numframes]-1)

**Return string: [RET]**

### CAM\_FG\_RECORDSTART

Start memory recording mode for the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_FG\_RECORDSTOP

Stop memory recording mode for the camera.

**Note:** To be called when recording is finished, i.e. when CAM\_FG\_GETSTATUS returns FG\_EOWRITE.

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_FG\_ABORTRECORD

Abort memory recording mode and resets memory for the camera.

**Note:**

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_FG\_SOFTTRIGGER

Send software trigger command to camera when trigger source is ,Software'

**Note:**

**Input parameters:**

- none

**Return string: [RET]**

### CAM\_FG\_ENABLEFORCESOFTTRIGGER [bforce]

Enable a software trigger to be active when another trigger mode has been activated: in the standard mode, if an external trigger is active, a software trigger is not taken into account. If this function is called with the parameter bforce set to true, the software trigger is always taken into account.

**Note:**

**Input parameters:**

- [bforce] : if set to 1, the software trigger is always taken into account (also if the trigger mode is set to external or auto). If bforce is set to 0, a software trigger is not taken into account when trigger mode is external or auto.

**Return string: [RET]**

## CAM\_FG\_SETAUTOTRIGGER [left] [top] [right] [bottom] [per]

Send software auto-trigger parameters to camera when trigger source is ,Auto' and activates the auto-trigger process.

**Note:**

**Input parameters:**

- [left], [top], [right], [bottom]: the region of interest coordinates where the auto-trigger takes place and is processed is transmitted through the ([left],[top]) and ([right],[bottom]) corners
- [per] : percentage threshold when the camera has to trigger : if the mean value in the ROI varies less than [per] %, the trigger is activated.

**Return string: [RET]**

## CAM\_FG\_GETSTATUS

Return memory status for the camera.

**Note:** See Annex for complete description of memory processing.

**Input parameters:**

- none

**Return string: [RET] [status]**

[status]:

- FG\_IDLE (2) if memory is in idle mode (in that mode, camera waits for a command)
- FG\_READ (4) if memory is currently reading a frame
- FG\_WRITE (8) if memory is currently writing a frame
- FG\_EOREAD (16) to notice an end of read
- FG\_EOWRITE (32) to notice an end of write
- FG\_FILL (64) if memory is currently filling memory
- FG\_EOFILL (128) to notice an end of filling cycle
- FG\_TRIGGERED (256) if camera memory has been triggered

## CAM\_FG\_GETMAXFRAMES

Return the maximal number of frames that can be acquired into camera memory with the current sensor size for the camera.

**Note:** See Annex for complete description of memory processing.

**Input parameters:**

- none

**Return string: [RET] [maxframes]**

[maxframes]: Maximal number of frames that can be acquired into camera memory with the current sensor size

## SSD Commands

---

### SSD Discovery Commands

#### CAM\_SSD\_GETSTATUS

Returns the SSD status.

**Note:** Only 8 bits are used, use mask 0x000000FF to extract them.

##### Input parameters:

- none

##### Return string: [RET] [ssdStatus]

[ssdStatus]: integer. Use mask 0x000000FF to access status (SSD status information is stored on bit0 to bit7. Bit description is below:

b0 = sata\_init\_ok\_0 = SSD init ok

b1 = sata\_busy\_0 = SSD is used

b2 = sata\_error\_0 = an error occurred, reboot the camera

b3 = ssd\_detected\_0 = an SSD is HW detected

b4 = ssd\_version\_ok[0], not used now

b5 = ssd\_format\_ok[0], not used now

b6 = ssd\_standby\_0, not used now

b7 = reserved

**b0=b3=1** ensure that the SSD is well connected and initialized

**b1=b2=0** ensure that the SSD is ready for operations

#### CAM\_SSD\_GETSSDPARAM

Get SSD parameters.

**Note:** Available size can be computed with formula:

FreeSize\_sect (in sector) = [SSDSize] - [SSD\_NextFreeAddr]

FreeSize\_Bytes = FreeSize\_sect x 512

##### Input parameters:

- none

**Return string: [RET] [SSDSize] [SSD\_Serial] [SSD\_Firmware] [SSD\_Model] [SSD\_InitVal] [SSD\_FormatVersion] [SSD\_SavedSeqNB] [SSD\_NextFreeAddr]**

[SSDSize] = unsigned long long

[SSD\_Serial] = char\*

[SSD\_Firmware] = char\*

[SSD\_Model] = char\*

[SSD\_InitVal] = int, when then SSD is Optronis Formated this value = 0x41434443

```
[SSD_FormatVersion] = int
[SSD_SavedSeqNB] = int, it is the number of sequences stored on the SSD
[SSD_NextFreeAddr] = unsigned long long, see note
```

## CAM\_SSD\_FORMAT

Format SSD to Optronis format.

**Note:** Once formatted, `ssdInitVal` takes value 0x41434443 (variable returned by command `Command_CAM_SSD_GetSSDParam`).

### Input parameters:

- **[option]**: must be set to 0, reserved for future use.

**Return string:** [RET]

## SSD Read Commands

### CAM\_SSD\_SETCURRENTSEQ

Select a sequence on the SSD to access its parameter and read frames.

**Note:** `CAM_SSD_GETSSDPARAM` has to be called before to know how many sequences are stored on the SSD.

Be careful, sequence index starts at 0.

This command is mandatory because it initialize the SSD reading path in the camera.

### Input parameters:

- **[sequenceID]**: integer, valid values are [0..N-1] if N sequences are stored in the SSD

**Return string:** [RET]

### CAM\_SSD\_GETCURRENTSEQ

Returns current selected sequence. See `CAM_SSD_SETCURRENTSEQ` command to modify this value.

**Note:**

### Input parameters:

- none

**Return string:** [RET] [selectedSequenceID]

### CAM\_SSD\_GETSEQHEADER

Each SSD sequence has a header containing useful information about the sequence, frame characteristics, etc... Each header is an array of WORD[256].

This command returns selected sequence header.

**Note:** Ex: “CAM\_SSD\_GETSEQHEADER 0 1” returns 4 bytes representing sequence frame number. If the sequence has 305.419.897 frames = 0x12345679, return string will be “12345679”. You will have to convert this string to an integer to recover the correct value.

**Input parameters:**

- [min] [max]

**Return string: [RET] [selectedSequenceHeader]**

selectedSequenceHeader = Word \*, it is a string formed by the concatenation of N WORD (16bit). its size N = [max]-[min] \* 16b

Header information:

```
// frame information
//-----
SSD_header[0] = (m_issdFrames);
SSD_header[1] = (m_issdFrames>>16);
SSD_header[2] = (resoX);
SSD_header[3] = (resoX>>16);
SSD_header[4] = (resoY);
SSD_header[5] = (resoY>>16);
SSD_header[6] = (fps);
SSD_header[7] = (fps>>16);
SSD_header[8] = (exptime);
SSD_header[9] = (exptime>>16);
SSD_header[10] = (trigpos);
SSD_header[11] = (trigpos>>16);
SSD_header[12] = (mode);
SSD_header[13] = (mode>>16);
SSD_header[14] = (nbseq);
SSD_header[15] = (nbseq>>16);
SSD_header[16] = (realfpsHex);
SSD_header[17] = (realfpsHex>>16);
SSD_header[18] = (realfpsHex>>32);
SSD_header[19] = (realfpsHex>>48);
SSD_header[20] = (bFG8bits);
SSD_header[21] = (bUF) + ((WORD)(bUS)<<1);

WORD 22 to 29 are Cam_SerialN

WORD 30:
// b0 = color sensor (see cam600dll.h: SENSOR_MONO=0 / SENSOR_COLOR=1)
// b2..b1= bayerType (see cam600dll.h: BAYER_GRGB=0 / BAYER_GBRG=1 / BAYER_RGGB=2 / BAYER_BGGR=3)
// b3 = m_issdTimeMarkerEN (0=disable / 1=enable)

// DDR and SSD sequence information
//-----
SSD_header[31] = ((m_RecordLeft & 0x0000FFFF));
SSD_header[32] = ((m_RecordLeft & 0xFFFF0000)>>16);
SSD_header[33] = ((m_RecordTop & 0x0000FFFF));
SSD_header[34] = ((m_RecordTop & 0xFFFF0000)>>16);
SSD_header[35] = stopposL;
SSD_header[36] = stopposM;

SSD_header[37] = (WORD)(m_bSSD_DDRSubSeqEn) | ((WORD)(m_bSSD_DDRAutoInc)<<1);

WORD 38..41 are trig frame time marker
```

```
// Reserved for future use
//-----
WORD 42..46 not used, available for new data

// User Information (can be retrieved using CAM_SSD_GETUSERINFO)
//-----
WORD 48 to 175 = 128 WORD

// SSD information
//-----
WORD 176 to 255
```

## CAM\_SSD\_GETUSERINFO

User Information (**UI**) is a dedicated User area in the sequence header to allow user saving custom information (date, names, etc...). This area size as a maximum capacity of 256Bytes

This command is returning selected sequence User Information.

**Note:** User information are a

### Input parameters:

- none

### Return string: [RET] [UserInformation]

UserInformation = string containing UI, size max = 256 bytes

## CAM\_SSD\_EDITUSERINFO

This command allows to edit selected sequence User Information (**UI**). Previous UI is lost and replaced by the new one.

**Note:**

### Input parameters:

- **[NewUserInformation]** string, size max = 256 bytes

### Return string: [RET]

## CAM\_SSD\_PLAYSTART

Prepare camera for SSD streaming.

**Note:**

### Input parameters:

- None

### Return string: [RET]

## CAM\_SSD\_PLAYSTOP

Stop SSD streaming and set camera and SSD ready for other operation than reading frames.

**Note:**

**Input parameters:**

- none

**Return string: [RET]**

## CAM\_SSD\_GETFRAMETM

Stop SSD streaming and set camera and SSD ready for other operation than reading frames.

**Note:**

**Input parameters:**

- [iframenum] [bSnap] [b8] [bRAW]

**Return string: [RET] [timemarker]**

- **iframenum** = frame index/number you want to read. If the sequence has N frames, iframenum valid values are [0..N-1]
- **bSnap** = set to 0, reserved for compatibility / future use
- **b8** = set to 1, reserved for compatibility / future use
- **bRAW** = set to 1, reserved for compatibility / future use
  
- **timemarker** = (unsigned long long) frame n° iframenum time marker.  
The camera has a rolling 64b  $\mu$ s counter and each frame gets a unique timemarker representing the end of exposure.

## SSD Write Commands

### CAM\_SSD\_DELSEQ

This commands allows to delete some sequence on the SSD to free space.

- Note:** Only the last sequences are deleted.  
 EX: 100 sequences are stored on the SSD  
 „CAM\_SSD\_DelSeq 20“ command is send.(i.e. nbOfSeqToDelete=20)  
 The last 20 saved sequences are deleted (sequences 80 to 99) and the SSD has 80 sequences left, (seq\_0 to seq\_79).  
 If nbOfSeqToDelete = numberOfStoredSeq, then the SSD is empty.  
 Alternatively, calling CAM\_SSD\_FORMAT also erase all sequences.

**Input parameters:**

- **[nbOfSeqToDelete]** must valid ( $\leq$  number of stored sequences)

**Return string: [RET] [selectedSequenceID]**

### CAM\_SSD\_SAVESEQ

Save sequence from DDR to SSD.

While saving, no operation are possible, the user will have to wait to use the camera.

- Note:** Check SSD saving progression and SSD status to know If the SSD saving operations are finished.

**Input parameters:**

- **[1stFrame] [LastFrame]**

**Return string: [RET]**

This function allows to save a subpart of the sequence using input parameters.

Ex: if a sequence has N=1000 frames, you can:

- Save all the sequence on the SSD calling “CAM\_SSD\_SAVESEQ 0 999”  
(1stFrame=0 and LastFrame=999)
- Save only a few framson the SSD calling “CAM\_SSD\_SAVESEQ N1 N2”  
With  $0 \leq N1 \leq N2 \leq N$   
(1stFrame=100 and LastFrame=199 to save only 100 frames starting at frame 100)

### GET SSD Saving Progression (command “REG\_READ 1A80”)

To get the SSD write progression you must call command “REG\_READ 1A80”

This command returns the progression in %:

**Return string: [RET] [progressionPercent]**

## Return codes from the Camera Commands

0	Successfully operation
1	-
2	Video live must be started first
3	Camera is busy
4	No sequence is available
5	No CamRecord is connected
6	-
7	The input parameter is out of range
8	GigE initialization error
9	An error has occurred when writing into the camera registers
10	The selected option is not available
11	IP has not been saved in flash
12	Frame corrupt
13	NIC and camera IPs don't match
14	-
15	No lens is connected
16	Error in lens command
17	Format is not available
18	Out of range (frame nb > frame max or sequence nb > seq max)
19	SSD full


## CamRecord-Sprinter Demo

The CamRecord-Sprinter Demo application is a Visual Studio 2013 C++Project. You will find the source code of CamRecord-Sprinter Demo in the “Sample” folder of the CamRecord Sprinter programmer Kit. The Demo application uses the following resources:

- Microsoft .Net Framework 4.5
- Optronis Camera Class (Camera.cpp and Camera.h files)

**Camera.cpp** and **Camera.h** contain source code to show how to send and receive **Camera Commands**. This can be integrated into your application software.

Additionally, a demo application **CamRecordSprinterDemo.cpp** is provided to allow first operation with the camera.

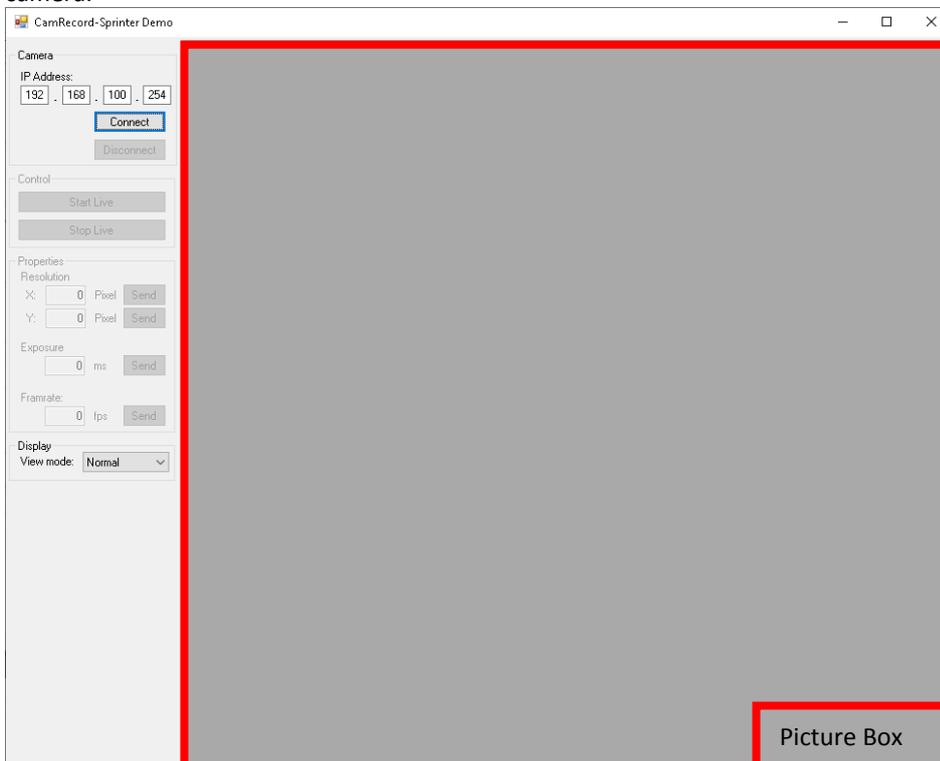

### Description:

#### Camera group:

Allows to connect and disconnect to the camera with the given IP address.

#### Control group:

Allows to Start and stop the live acquisition.

This controls are only available if the software is connected to the camera.

#### Properties group:

Allow to set camera properties like resolution, exposure time and framerate.

This controls are only available if the software is connected to the camera and the camera isn't in ,Live' mode.

#### Display group:

Allows to change the display mode in the Picture Box. (“Normal”, “Center Image” and “Strech”)

## 1900dll.dll

---

### Getting started

The 1900dll.dll is another way to communicate with the Camera. It allows to find a camera on a network, connect/disconnect a camera, send a command and receive an image buffer. In this part, we will give some basic way to handle with the 1900dll.dll. Please refer to “Camera Commands” section for detailed description of camera commands.

#### IMPORTANT:

The 1900dll.dll is not necessary to develop your own application. It is a help to find the camera(s) on a network if you don’t have the camera(s) IP address. If the camera(s) keeps the same IP you can connect directly by opening a socket at the specific IP address and port.

#### First step: Initialization of the Gigabit Ethernet Interface

The first step for your application is to scan the network to find your camera(s). That is done by calling the function CAM\_IPScan. That function scans the network to find the attached cameras that are in the same subnet as the Network Interface Cards (NICs). Use CAM\_IPScanList to get the list of the attached devices.

#### Second step: Initialization of a camera on the network

After the first step previously described, each camera on the network can be addressed. Call CAM\_Connect with a given IP address, you will get a welcome message from the camera. Then the camera is ready to get commands from the host.

#### Third step: Communicate with the camera

To communicate with the camera, you only have to send ethernet command strings (the prototypes of the commands are described in the next section) by calling the function CAM\_SendCommand. Then you get an ethernet answer string from the camera.

### Function description

#### int CAM\_IPScan ()

Scans the network for the CamRecord Sprinter CR IP-compatible cameras (i.e. cameras that are in the same subnet as the NICs).

**Note:** Must be the first function called in the main program.

#### Input parameters:

None

#### Return value:

CAMDLL\_OK.

#### int CAM\_IPScanList (char \*s)

Returns the list of the attached devices.

**Note:** Must be the first function called in the main program.

#### Input parameters:

None

#### Return value:

- [s]: string containing the list of cameras connected with IP and serial numbers. The format

is the following:

[First Camera IP]|[ First Camera Serial Number]|[Second Camera IP]|[ Second Camera Serial Number]|... [Last Camera IP]|[ Last Camera Serial Number]|

For example:

192.254.128.45|1902-ST-010|192.254.128.12|1902-ST-025|

### int CAM\_Connect (char \*s, int inode)

Open a socket for a given camera IP address.

#### Note:

##### Input parameters:

- [s]: NIC IP address
- [inode]: integer containing the id of the camera associated to the IP address. User must choose an id associated the IP address. That id will be used in all other function to identify the camera.

##### Return value:

CAMDLL\_OK.

### int CAM\_DisConnect (int inode)

Close a socket for a given camera id.

#### Note:

##### Input parameters:

- [inode]: camera id.

##### Return value:

CAMDLL\_OK.

### int CAM\_SendCommand (int inode, char \*cmd, char \*ret)

Sends a command string a given camera. The command strings are described in the next section.

#### Note:

##### Input parameters:

- [inode]: camera id.
- [cmd]: command string

##### Return value:

- [ret]: string containing the answer of camera.

### int CAM\_GetBuffer (int inode, char \*buf, int sizeX, int sizeY)

Gets the image buffer if an image command request has been called.

#### Note:

##### Input parameters:

- [inode]: camera id.
- [buf]: 8-bit buffer that contains the image datas
- [sizeX]: width of buffer to retrieve
- [sizeY]: height of buffer to retrieve

**Return value:**  
CAMDLL\_OK.

## SSDLib.dll

---

A 2.5" SSD (Solid-State-Drive) is installed inside the camera and used to save sequences recorded in the volatile DDR memory. As long as SSD is installed inside the camera, **camera commands** allow access and control the data on the SSD.

However, the SSD can be removed from camera and be directly connected to a standard USB docking station (SATA III to USB 3 for example). As data are saved on the SSD by using an Optronis custom file format, you can't access directly data using standard Windows functions.

To see and extract video data without the camera, Optronis provides a Windows DLL "SSDLib.dll".

### int exSSD\_IsDrive()

Check if a SSD drive is connected to the PC.

**Note:**

**Input parameters:**

- None

**Return value:**

- SUCCESS if a SSD drive is connected to the PC
- ERROR\_NO\_SSD\_DETECTED if no SSD drive is found

### int exSSD\_OpenDrive()

Open the SSD Drive.

**Note:**

**Input parameters:**

- None

**Return value:**

- SUCCESS if the SSD drive has been successfully open
- ERROR\_NO\_SSD\_DETECTED if no SSD drive is found
- ERROR\_SSD\_NOT\_OPEN if SSD drive opening process went wrong
- ERROR\_NO\_SEQUENCE\_FOUND if no sequence is stored on the SSD drive

### int exSSD\_GetSeqNumber(\_\_int64 \*n)

Get the number of stored sequences.

**Note:**

**Input parameters:**

- None

**Output parameters:**

- \_\_int64 \*n: Number of sequence stored in the SSD drive

**Return value:**

- SUCCESS if no error.
- ERROR\_SSD\_NOT\_OPEN if SSD drive opening process went wrong.

## int exSSD\_SetCurrentSeq(\_\_int64 seq)

Select the current sequence.

**Note:****Input parameters:**

- \_\_int64 seq: Index of the sequence to select. Index must be between 0 and the number of sequences - 1.

**Return value:**

- SUCCESS if no error.

## int exSSD\_GetSeqHeader(\_\_int64 seq, long \*frames, int \*resoX, int \*resoY, long \*fps, long \*exptime, long \*trigpos, int \*mode, \_\_int64 \*realfpsHex, int \*bFG8bits, unsigned char \*Cam\_SerialN, int \*bSensorColor, int \*sensorBayer, int \*ssdTimeMarker\_en, int \*recordLeft, int \*recordTop)

Get the sequence header from the selected sequence.

**Note:****Input parameters:**

- \_\_int64 seq: The sequence number to access

**Output parameters:**

- long \*frames: The number of frames stored in the sequence
- int \*resoX: The image width
- int \*resoY: The image height
- long \*fps: The framerate in frames per second
- long \*exptime: The exposure time in us
- long \*trigpos: The trigger position within the sequence
- int \*mode: The acquisition mode
- \_\_int64 \*realfpsHex: the real framerate
- int \*bFG8bits: The pixel depth
  - 0 = 10bits
  - 1 = 8bits
- unsigned char \*Cam\_SerialN: The camera serial number
- int \*bSensorColor: The sensor color format
  - 0 = Monochrome sensor
  - 1 = Color sensor
- int \*sensorBayer: The bayer pattern format
  - 0 = GRBG
  - 1 = GBRG
  - 2 = RGGB
  - 3 = BGGR
  - 4 = None
- int \*ssdTimeMarker\_en: Internal parameter, please do not use
- int \*recordLeft: Offset x
- int \*recordTop: Offset y

**Return value:**

- SUCCESS if no error.

```
int exSSD_GetSeqHeaderTrigTM(__int64 seq, long *frames, int *resoX, int *resoY,
long *fps, long *exptime, long *trigpos, int *mode, __int64 *realfpsHex, int
*bFG8bits, unsigned char *Cam_SerialN, int *bSensorColor, int *sensorBayer, int
*ssdTimeMarker_en, int *recordLeft, int *recordTop, __int64 *trigTM, bool
*wbCoeffAvailable, int *wbCoeff1, int *wbCoeff2, int *wbCoeff3, int *wbCoeff4)
```

Get the sequence header from the selected sequence.

**Note:****Input parameters:**

- \_\_int64 seq: The sequence number to access

**Output parameters:**

- long \*frames: The number of frames stored in the sequence
- int \*resoX: The image width
- int \*resoY: The image height
- long \*fps: The framerate in frames per second
- long \*exptime: The exposure time in us
- long \*trigpos: The trigger position within the sequence
- int \*mode: The acquisition mode
- \_\_int64 \*realfpsHex: the real framerate
- int \*bFG8bits: The pixel depth
  - 0 = 10bits
  - 1 = 8bits
- unsigned char \*Cam\_SerialN: The camera serial number
- int \*bSensorColor: The sensor color format
  - 0 = Monochrome sensor
  - 1 = Color sensor
- int \*sensorBayer: The bayer pattern format
  - 0 = GRBG
  - 1 = GBRG
  - 2 = RGGB
  - 3 = BGGR
  - 4 = None
- int \*ssdTimeMarker\_en: Internal parameter, please do not use
- int \*recordLeft: Offset x
- int \*recordTop: Offset y
- \_\_int64 \*trigTM: Time marker reference
- bool \*wbCoeffAvailable: White balance coefficients available
- int \*wbCoeff1: White balance coefficient 1
- int \*wbCoeff2: White balance coefficient 2
- int \*wbCoeff3: White balance coefficient 3
- int \*wbCoeff4: White balance coefficient 4

**Return value:**

- SUCCESS if no error.

```
int exSSD_GetUserInfo(int *userInfoSize, unsigned char *userInfo)
```

Get the user information.

**Note:**

**Input parameters:**

- int \*userInfoSize: Pointer to the buffer size

**Output parameters:**

- unsigned char \*userInfo: Pointer to the buffer

**Return value:**

- SUCCESS if no error.

```
int __cdecl exSSD_EditUserInfo(char *userInfo)
```

Edit the user information.

**Note:**

**Input parameters:**

- char \*userInfo:

**Return value:**

- SUCCESS if no error.

```
int __cdecl exSSD_GetFrame(__int64* timeMarker, __int64 frame, unsigned char *pimage)
```

Get a frame on the current selected sequence by exSSD\_SetCurrentSeq.

**Note:**

\_\_int64 frame: Index of frame to retrieve from the sequence. Index must be between 0 and the number of acquired frames -1

**Input parameters:**

- int \*userInfoSize: Pointer to the buffer size

**Output parameters:**

- \_\_int64\* timeMarker: Time marker of the image in  $\mu$ s
- unsigned char \*pimage: Pointer to the destination image buffer

**Return value:**

- SUCCESS if no error.

```
int exSSD_DeINSeq(int _seqToDelNb)
```

Delete N sequence from the end of the SSD.

**Note:**

**Input parameters:**

- int \_seqToDelNb: Number of sequences to delete

**Return value:**

- SUCCESS if no error.

## SSDLib Example

```

#include "SSDLib.h"
#include <memory.h>

int main(void)
{
    int dll_result(SUCCESS);
    __int64 sequences(0);
    int resolution_x(0), resolution_y(0), selected_seq(0);
    long frames(0);

    // Search for SSD drive
    dll_result = exSSD_IsDrive();
    if(dll_result == SUCCESS)
    {
        // Open SSD drive
        dll_result = exSSD_OpenDrive();
    }
    if(dll_result == SUCCESS)
    {
        // Get number of stored sequences
        dll_result = exSSD_GetSeqNumber(&sequences);
    }
    if(dll_result == SUCCESS)
    {
        if(sequences > 0)
        {
            // Select the first sequence
            dll_result = exSSD_SetCurrentSeq(selected_seq)
        }
    }
    if(dll_result == SUCCESS)
    {
        // Read sequence header from the first sequence
        long fps(0), exposure_time(0), trigger_position(0);
        __int64 real_fps_hex(0);
        int mode(0), bitdepth8(0), offset_x(0), offset_y(0);
        int color_mode(0), bayer_format(0), time_marker_en(0);
        unsigned char serial_number_camera[128];
        __int64 time_marker_reference;
        int wb_c1(0), wb_c2(0), wb_c3(0), wb_c4(0);
        bool wb_available(false);

        memset(serial_number_camera, 0, 128 * sizeof(unsigned char));

        dll_result = exSSD_GetSeqHeaderTrigTM(selected_seq,
                                                &frames,
                                                &resolution_x,
                                                &resolution_y,
                                                &fps,
                                                &exposure_time,
                                                &trigger_position,
                                                &mode,
                                                &real_fps_hex,
                                                &bitdepth8,
                                                serial_number_camera,
                                                &color_mode,
                                                &bayer_format,
                                                &time_marker_en,
                                                &offset_x,
                                                &offset_y,
                                                &time_marker_reference,
                                                &wb_available,
                                                &wb_c1,
                                                &wb_c2,
                                                &wb_c3,
                                                &wb_c4);
    }
}

```

```
if(dll_result == SUCCESS)
{
    unsigned char* image_buffer(NULL);
    __int64 timme_marker(0), image_number(0);

    if(frames > 0)
    {
        // Create image buffer
        image_buffer = new unsigned char[resolution_x * resolution_y * sizeof(unsigned char)];

        // Read the first image of the sequence
        result = exSSD_GetFrame(&timme_marker, image_number, image_buffer);

        // Process the image data
        // ...

        delete[] image_buffer;
    }
}
}
```